 


**OLYMPUS®**

 
DIGITAL VOICE RECORDER

**DS-2300**

**Quick Start Guide**

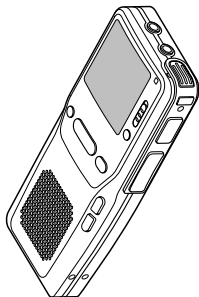

## Getting Started

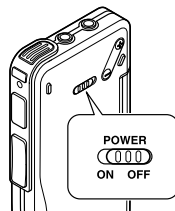



### Turning ON the Recorder

Slide the power switch to the ON position to activate the recorder.

### Power Save Mode

When the recorder is ON but not in use for 10 minutes, it will switch to power save mode automatically. To reactivate the recorder again, press any of the buttons on the recorder.

 
 
## Recording

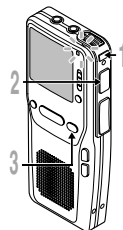

- (a) Current recording mode
- (b) New file number
- (c) Selected Author ID

- 1 Press the **NEW** button to create a new file.
- 2 Press the **REC** button to start recording.  
The record/play indicator lamp glows red.  
Aim the microphone at the sound source.
- 3 Press the **STOP** button to stop recording.  
If you want to append additional recordings to the same file, press the REC button again.



## Overwrite Recording

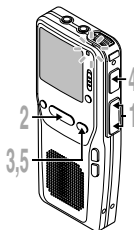  

- (a) Current playback time
- (b) Total recording time of the file being played


- 1 Press the **FF** or **REW** button to choose the file into which you want to overwrite.
- 2 Press the **PLAY** button to play the file.
- 3 Press the **STOP** button where you want to start overwriting.
- 4 Press the **REC** button to start overwriting.  
The record/play indicator lamp glows red.
- 5 Press the **STOP** button to stop overwriting.

## Insert Recording

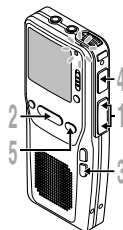  

- 1 Press the **FF** or **REW** button to choose the file into which you want to insert additional recordings.
- 2 Press the **PLAY** button to start playback.
- 3 While playing the file, press the **FOLDER/MENU** button to insert an additional recording.
- 4 Press the **REC** button to start inserting additional recording.  
The record/play indicator lamp glows red.
- 5 Press the **STOP** button to stop inserting additional recording.

## Display (LCD Panel)

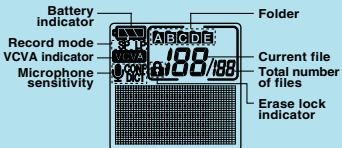 

**OLYMPUS®**

OLYMPUS IMAGING CORP.

Shinjuku Monolith, 3-1 Nishi-Shinjuku 2-chome, Shinjuku-ku,  
Tokyo 163-0914, Japan. Tel. 03-3340-2111

OLYMPUS IMAGING AMERICA INC.

Two Corporate Center Drive, PO BOX 9058 Melville, NY 11747-9058,  
U.S.A. Tel. 1-800-622-6372

OLYMPUS IMAGING EUROPA GMBH

(Premises/Goods delivery) Wendenstrasse 14-18, 20097 Hamburg,  
Germany. Tel. 040-237730

(Letters) Postfach 10 49 08. 20034 Hamburg. Germany.

 
 
OLYMPUS UK LTD.

2-8 Honduras Street, London EC1Y 0TX, United Kingdom,  
Tel. 020-7253-2772

<http://www.olympus.com>

E1-BZ8093-01  
AP0503

## Playing


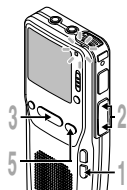


- a Current playback time
- b Total recording time of the file being played



- 1 Press the **FOLDER/MENU** button to choose folder.
- 2 Press the **FF** or **REW** button to choose the file that you want to play.
- 3 Press the **PLAY** button to start playback. The record/play indicator lamp glows green.
- 4 Press the **VOLUME (+)** or **VOLUME (-)** button to select the proper sound volume.
- 5 Press the **STOP** button at any point you want to stop the playback. Resume playback by pressing PLAY button again.


## Erasing a File

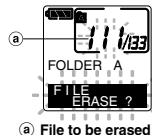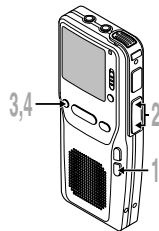  

- a File to be erased

- 1 Press the **FOLDER/MENU** button to choose a folder.
- 2 Press the **FF** or **REW** button to choose the file you want to erase.
- 3 Press the **ERASE** button. "FILE ERASE ?" flashes on the display for approximately 8 seconds.
- 4 Press the **ERASE** button once more while "FILE ERASE ?" is flashing. The display changes to "FILE ERASE !" and erasing will start.  
\* "ERASE DONE" is displayed when the file is erased. File numbers will be reassigned automatically.

## Other Function

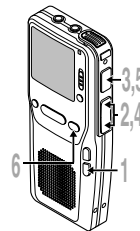 

- 1 Press and hold the **FOLDER/MENU** button for 1 second or longer.
- 2 Press the **FF** or **REW** button to choose the setting item.
- 3 Press the **REC** button.
- 4 Press the **FF** or **REW** button to choose the setting item.
- 5 Press the **REC** button to complete the setup screen.
- 6 Press the **STOP** button to close the main menu.

### MENU

Setting item	Setup
REC MODE	SP, LP
MIC SENSE	CONF or DICT
EXIT	Exit MENU and return to STOP mode.
SUB MENU	Switches to the SUB MENU.
VCVA	OFF or ON

### SUB MENU

Setting item	Setup
LOCK	OFF or ON
BEEP	OFF or ON
FORMAT	Recorder formatting.
EXIT	Returns to the MENU.
CONTRAST	1 to 12
BACKLIGHT	OFF or ON
TIME&DATE	Time/Date setting.

Details of each setting item refer to the Reference Manual for more information.